

DREO

Air Circulator Fan

USER MANUAL

www.dreo.com

DR-HAF002

Looking for help?

Contact us to get expert support.



support@dreo.com

 


[\(888\) 290-1688](tel:(888)290-1688)



www.dreo.com

Mon - Fri, 9:00 am-5:00 pm PST/PDT

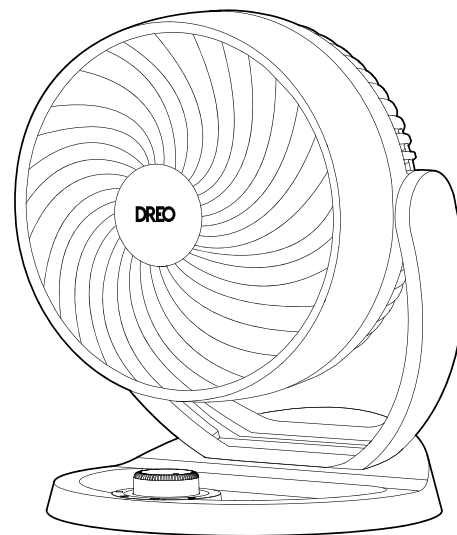

//

Thanks for Choosing **DREO!**

Your support means the world to us. We hope you enjoy our product as much as we did creating it.



CONTENTS

1

IMPORTANT SAFETY INSTRUCTIONS

1-2

2

KNOWING YOUR AIR CIRCULATOR FAN

3

3

USING YOUR AIR CIRCULATOR FAN

4-6

4

CLEANING AND MAINTENANCE

7-10

5

TROUBLESHOOTING

11

6

DREO CUSTOMER CARE

12

IMPORTANT SAFETY INSTRUCTIONS



READ ALL CAUTIONARY MARKINGS ON THE APPLIANCE AND SAFETY INSTRUCTIONS IN THE USER MANUAL BEFORE USE.



Do not cover the air inlet and outlet while in operation.



Do not use the air circulator near flammables and combustibles.

General Safety

- Children shall not play with the appliance. Cleaning and maintenance shall not be performed by children without supervision.
- Use the appliance as described in the user manual only. Any other use not recommended in the user manual may cause fire, electrical shock, or personal injury.
- This appliance can be used by children aged above 8 years and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of this appliance in a safe way and understand the hazards involved.

Operation Safety

- Place the appliance on a flat, dry surface before use.
- Do not** immerse in water and any other liquids.
- Do not** use the appliance until the base is installed.
- Do not** insert your fingers, pencil and any other objects into the grilles under any circumstances.
- Do not** dismantle, repair, or modify. All servicing should be performed by qualified personnel.
- Do not** operate the unit close to the curtain. **Do not** hang foreign objects on the grille to prevent damaging the balance of the fan or rotational structure.
- Do not** operate the fan under overly humid, high-temperature, dusty environment or the place where acid or alkali is stored.
- Fans should never blow directly on infant, the elderly and patients for a long time.

Electricity Safety

WARNING:

- Make sure that the voltage of your electricity supply is the same as that indicated on the appliance.
- Always unplug before cleaning or leaving the appliance unused for a long period of time. Keep your hands dry when plugging/unplugging.
- Do not operate any air circulator with a damaged cord or plug. Discard air circulator or return to an authorized service facility for examination and/or repair.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
- WARNING:** To reduce the risk of fire or electric shock, do not use this air circulator with any solid-state speed control device.
- This appliance employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Replace the fuse as per the user servicing instructions and check the appliance. If the replacement fuse blows, a short-circuit may be present and the appliance should be discarded or returned to an authorized service facility for examination and/or repair.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

WARNING: To reduce the risk of fire, electric shock or injury to persons, do not use replacement parts that have not been recommended by the manufacturer (e.g. Parts made at home using a 3D printer).

FOR HOUSEHOLD USE ONLY READ AND SAVE THESE INSTRUCTIONS

Gentle Reminder:



Check the appliance regularly and refer to TROUBLESHOOTING or contact our customer support if it shows any of the following signs:

- Power cord or plug is damaged.
- Loud noise, unusual smell or excessive heat.




Specifications

Model	DR-HAF002
Input	AC 120V 60Hz
Rated Power	48W

KNOWING YOUR AIR CIRCULATOR FAN

2

   
Package Contents

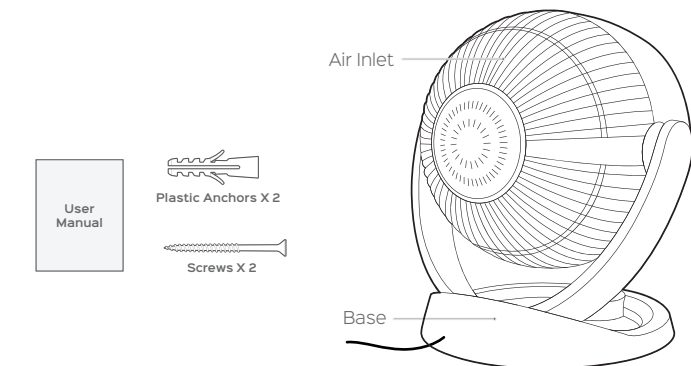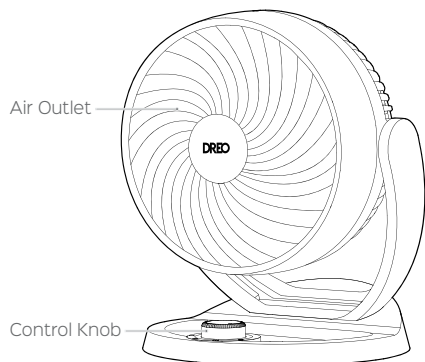

USING YOUR AIR CIRCULATOR FAN

3

 
Getting the Most out of Your Air Circulator Fan

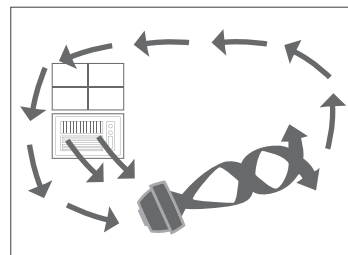

Summer:

Use with Air Conditioner

 
Position the air circulator in front of your AC to circulate cold air and provide better cooling.

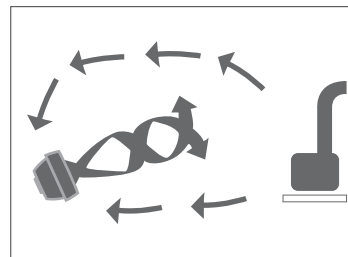

Winter:

Use with Heater

 Send the heat to corner of the room and circulate warm air faster.

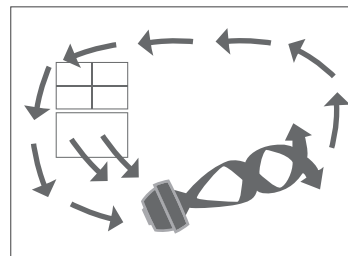

Spring & Fall:

 
Circulation

Make the indoors as fresh and pleasant as the outdoors


Wall Mounting Your Fan (Optional)

1. Find a brick or concrete wall and mark the position where the fan will be mounted.


2. Make sure there is a 124mm / 4.88inch distance between the two holes.

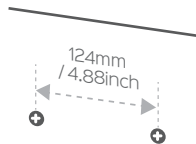

 
3. Screw the plastic anchors onto the wall with a drill. Leave 1/3 inch of the screws exposed.

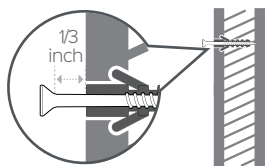

 
4. Line up the holes on the base of the fan with the screws on the wall and hang the fan.

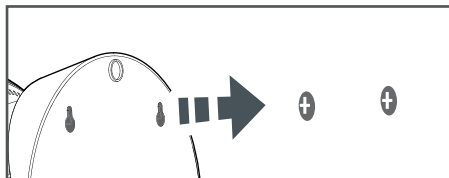

General Operations

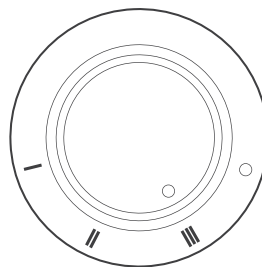 

 
Plug in and twist the control knob clockwise to adjust the fan speed to High, Medium, and Low.

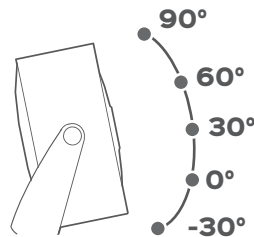

Tilt the fan head by hand to the desired angle.

CLEANING AND MAINTENANCE

 4

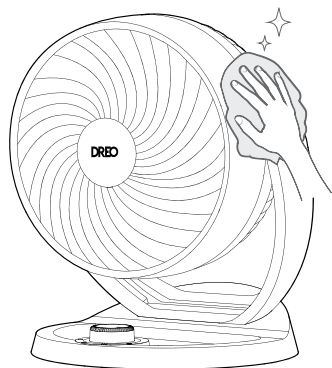

Outer Surface

Gently wipe off the dust with a soft, dry cloth.

CAUTION



1. Always unplug the air circulator before any cleaning or maintenance to avoid the risk of fire, electric shock, or injury to persons.
2. Do not immerse in water or get water inside the motor housing.
3. Do not use any chemical agents when cleaning the fan.
4. Store in a cool, dry place and cover it to protect from dust.

 
Front Grille and Blades



WARNING


To reduce the risk of electrical shock and injury to persons, turn off and unplug the appliance before any cleaning and maintenance.

1

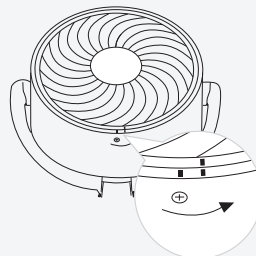


Remove the screw on the front grille, rotate the grille counterclockwise to take it off.

 2

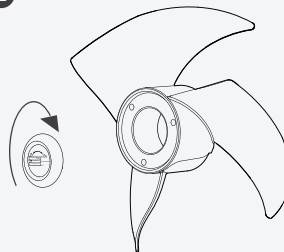


Remove the blade cap by rotating it as shown and take the blade assembly out of the shaft.

 3

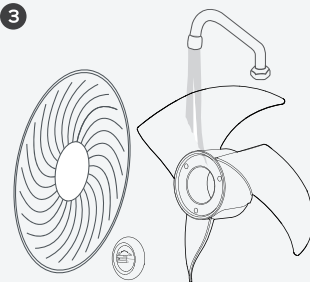


Rinse cap, blades, and grille under running water or with a clean, damp cloth.

 4

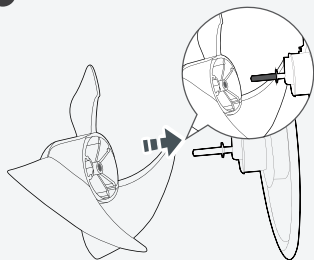

Dry up all parts, and insert the blade assembly back into the shaft by aligning the D-shaped points on the center.

 
5

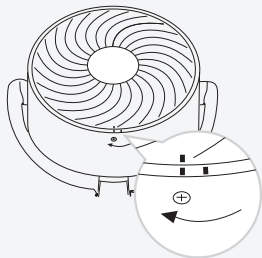

Align the point on the front grille with the right point on the casing, then rotate the grille clockwise and install the screw back in place.

User Servicing Instructions (Fuse)

 This appliance features a fused safety plug that protects against overload or short-circuit situations. If the fuse blows, please cut off power and follow the below instructions or consult a qualified electrician.

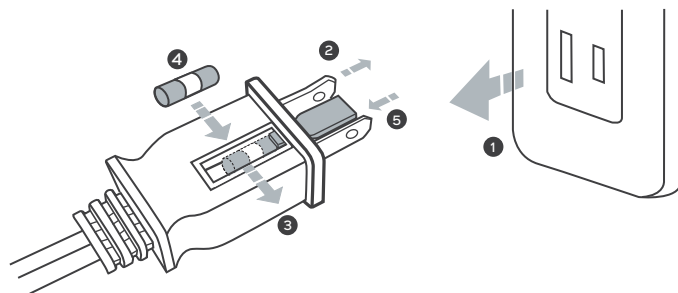

- 1 Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on cord.
- 2 Open fuse cover. Slide open fuse access cover on top of attachment plug towards blades.
- 3 Remove fuse carefully. Push the fuse from the other side to remove the fuse.
- 4 Risk of fire. Replace fuse only with 5 Amp, 125 Volt fuse.
- 5 Close fuse cover. Slide closed the fuse access cover on top of attachment plug.



WARNING

Risk of fire. Do not replace attachment plug. Contains a safety device(fuse) that should not be removed. Discard product if the attachment plug is damaged.

TROUBLESHOOTING

5

My air circulator won't turn on!

Make sure that the cord is connected to a powered outlet and the mains voltage corresponds with the voltage indicated on the air circulator.

My air circulator is shaky and wobbling!

Place the air circulator on a flat, level surface.

My air circulator is making vibration and noise!

1. Place the air circulator on a flat, level surface.
2. Be sure not to insert anything into the air inlet and outlet.
3. It is normal that the fan makes a little noise when manually adjusting the fan head.

If your problem is not listed or still persists, please contact our Customer Support (**see page 12**)

DREO CUSTOMER CARE

6

Default 12-Month Warranty

This appliance is covered by Dreo warranty for 12 months from the date of its original purchase.

Extend Your Warranty

Extend your warranty by registering your new appliance on our website <https://dreo.com/warranty>.

The warranty will not apply in cases of:

1. Accident, misuse, or repairs performed by unauthorized personnel.
2. Any unit that has been tampered with or used for commercial purposes.
3. Normal wear and tear of wearable parts.
4. Use of force, damage caused by external influences.
5. Damage caused by non-observance of the User Manual, e.g. connection to an unsuitable mains supply or noncompliance with the instructions.
6. Partially or completely dismantled appliances.
7. Defects caused by or resulting from damages from shipping or from repairs, service, or alteration to the product or any of its parts that have been performed by a repair person not authorized by Dreo.

We can only provide after-sales service for products that are sold by Dreo or Dreo authorized retailers and distributors. If you have purchased the appliance from a different place, please contact your seller for return and warranty issues.



(888) 290-1688



support@dreo.com



www.dreo.com

Mon - Fri, 9:00 am-5:00 pm PST/PDT



www.dreo.com



Shenzhen Hesung Innovation
Technology Co., LTD



26F, Bldg A7, Creative City, Shenzhen, China

MADE IN CHINA



intertek
5018396